


Electrical Safety Recall

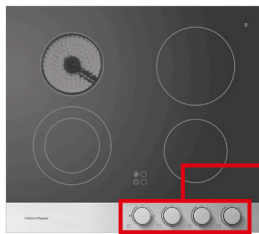

Control panel and dials on front right

Electric on ceramic glass with 4 or 5 elements

Fisher & Paykel Appliances Ltd is issuing a recall on certain electric cooktop models sold since 2011. Model numbers start with CE604CB, CE604LB or CE905CB, and serial numbers start with 1, 2, 3, 4, BK, BL, BU, BY, EF, EI, ES.

Defect: May not be earthed effectively.

Hazard – Risk of Electric Shock: Spills around the control panel and dials can leak into the electrical components. This may cause an electric shock to the user.

What to do:

- Check the model and serial number on the back of your User Guide. If not available, visit the website or call for assistance identifying your cooktop.



Model number

Serial number



Serial number

Model number

- Visit www.fisherpaykel.co.nz/recall or call **0800 004 921** (Mon-Fri 8am-9pm, Sat 9am-4pm) to confirm your cooktop is included in the recall and to book a free repair.
- Cooktop can continue to be used while awaiting repair, **except** if a spill reaches the control panel or dials. If this happens, turn it off at the wall immediately and contact Fisher & Paykel.

See www.consumeraffairs.govt.nz for other New Zealand consumer product recalls.