

BUTTON BATTERY CHRISTMAS DECORATIONS



Article Numbers:

6240755 - HC TD Acrylic Clear Bear w/LED Light 6244016 - HC TD Clay Reindeer w/LED Light 6244018 - HC TD Clay Snowman w/LED Light 6244020 - HC TD Clay Santa w/LED Light

Defect: The battery compartment on the above Christmas lighting is not secured.

Hazard: If children gain access to the button battery and swallow it, they may suffer internal injuries, which can result in serious illness and even death.

What to do: You should stop using these decorations and if purchased from Farmers Trading Company Limited, return them to your nearest store for a full refund.

Contact Details: For more information please contact Farmers Customer Service line on 0800 327 637 Monday to Friday 8:30am - 5:00pm. www.Farmers.co.nz